



WEIGHT RATED & TESTED FOR 24/7 INTENSIVE USE ENVIRONMENTS

IRON HORSE SEATING

OPERATING INSTRUCTIONS:

ALL MODELS

IRON HORSE Seating intensive use office chairs are equipped with a range of adjustable features. See below for instructions.



A. DELUXE COMFORT HEADREST

Height and tilt adjustable. Lift to adjust height. Locks into desired position. Push button on headrest guide and apply pressure to lower. Infinite range of angled positions.

B. DELUXE TILT UP ARMRESTS

Angle adjustable. Set to desired angle and turn knob clockwise to lock into position. Turn wheel counter-clockwise to release and adjust. Flip up completely out of the way.

C. AIR LUMBAR

Squeeze bulb to fill bow-tie lumbar chamber located in the lower backrest. Press button to release air from the chamber.

D. HEIGHT ADJUSTMENT

Hold paddle in upward position and pull upward on the seat cushion to raise seat height. Lift paddle while sitting to lower seat height. Release paddle to lock height position.

E. INDEPENDENT BACKREST RECLINE

Adjust backrest recline independent of seat cushion tilt recline. Pull lever up to adjust backrest angle. Total backrest recline 21°

F. TILT RECLINE LOCK

Push paddle down to lock tilt position and pull up to unlock tilt position. Total recline 24°

G. TILT TENSION CONTROL

Twist control forward (clockwise) to increase recline tension and backward (counter-clockwise) to decrease recline tension.



TRADITIONAL HEADREST

Height and tilt adjustable. Lift to adjust height. Locks into desired position. Push button on headrest guide and apply pressure to lower. Infinite range of angled positions.



3D ARMRESTS

Height, width, angle adjustable. Push button on outside arm and raise / lower to adjust height. Release to lock. Push button underneath pad and slide pad fore/aft.



SEAT SLIDER

Pull knob while standing and slide seat cushion fore/aft. Release knob to lock into desired position.